

## DIN W48 × H48mm, Preset counter/timer

### Features

- Upgraded counting speed : 1cps/30cps/2kcps/5kcps
- Selectable voltage input (PNP) or No-voltage input (NPN)
- Addition of Up/Down input mode
- Available to set a decimal point (Fixed decimal point of display)
- Wide range of input power supply :  
100–240VAC 50/60Hz, 12–24VAC/DC (Option)
- Selectable Counter/Timer by internal DIP switch
- Various time range
- Built-in microprocessor

**⚠ Please read "Caution for your safety" in operation manual before using.**



### Ordering information

<b>FX</b>	<b>4</b>	<b>S</b>	<b>I</b>	
Item	Digit	Size	Output	
	4	Y	I	Blank
	5			Single preset
				Indicator
				DIN W48 × H48mm
				9999 (4 Digit)
				99999 (5 Digit)
				Counter/Timer

### Specifications


Model	Single preset Indicator	FX4S	FX5S-I
Digit		4	5
Digit size		W3.8 × H7.6mm	W4 × H8mm
Power supply		100–240VAC 50/60Hz, 12–24VAC/DC (Option)	
Allowable voltage range		90 to 110% of rated voltage	
Power consumption		• Indication type : Approx. 4.7VA (240VAC 60Hz), Approx. 5.6VA (24VAC 60Hz), Approx. 2.8W (24VDC) • Single preset : Approx. 5.7VA (240VAC 60Hz), Approx. 4.5VA (24VAC 60Hz), Approx. 3W (24VDC)	
Max. counting speed for CP1, CP2		Selectable 1cps/30cps/2kcps/5kcps by internal DIP switch	
Min. input signal width	INHIBIT input RESET input	Approx. 20ms	
Input	CP1, CP2 input (INHIBIT) RESET input	Input logic is selectable [Voltage input] Input impedance : 5.4kΩ "H" level : 5–30VDC, "L" level : 0–2VDC [No-voltage input] Impedance at short-circuit : Max. 1kΩ, Residual voltage at short-circuit : Max. 2VDC, Impedance at open-circuit : Min. 100kΩ	
One-shot output time		0.05 to 5sec.	—
Control output	Contact	Type Capacity	SPDT (1c) —
	Solid-state	Type	—
		Capacity	250VAC 3A at resistive load 30VDC Max. 100mA Max.
Memory protection		10 years (When using non-volatile semiconductor memory)	
External power		12VDC ±10% 50mA Max.	
Insulation resistance		Min. 100MΩ (at 500VDC megger)	
Dielectric strength		2000VAC 50/60Hz for 1 minute	
Noise strength	AC power	±2kV the square wave noise (pulse width : 1μs) by the noise simulator	
	DC power	±500V the square wave noise (pulse width : 1μs) by the noise simulator	
Vibration	Mechanical	0.75mm amplitude at frequency of 10 to 55Hz in each of X, Y, Z directions for 1 hour	
	Malfunction	0.5mm amplitude at frequency of 10 to 55Hz in each of X, Y, Z directions for 10 minutes	
Shock	Mechanical	300m/s <sup>2</sup> (Approx. 30G) in X, Y, Z directions for 3 times	
	Malfunction	100m/s <sup>2</sup> (Approx. 10G) in X, Y, Z directions for 3 times	
Relay life cycle	Mechanical	Min. 10,000,000 times	
	Electrical	Min. 100,000 times (250VAC 3A at resistive load)	
Ambient temperature		–10 to 55°C (at non-freezing status)	
Storage temperature		–25 to 65°C (at non-freezing status)	
Ambient humidity		35 to 85%RH	
Approval			
Unit weight		AC type : Approx. 147g, DC type : Approx. 153g	AC type : Approx. 137g, DC type : Approx. 143g

- (A) Photo electric sensor
- (B) Fiber optic sensor
- (C) Door/Area sensor
- (D) Proximity sensor
- (E) Pressure sensor
- (F) Rotary encoder
- (G) Connector/Socket
- (H) Temp. controller
- (I) SSR/Power controller
- (J) Counter**
- (K) Timer
- (L) Panel meter
- (M) Tacho/Speed/Pulse meter
- (N) Display unit
- (O) Sensor controller
- (P) Switching power supply
- (Q) Stepping motor & Driver & Controller
- (R) Graphic/Logic panel
- (S) Field network device
- (T) Production stoppage models & replacement


# FXS Series

## Connections

### FX4S

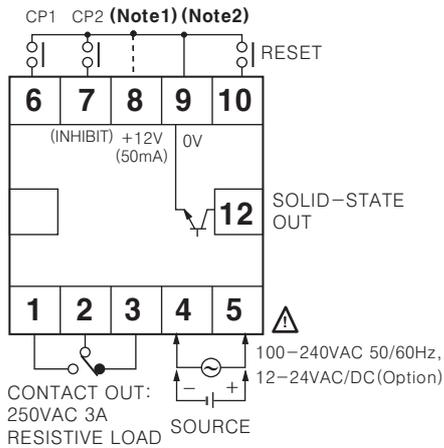



### FX5S-I

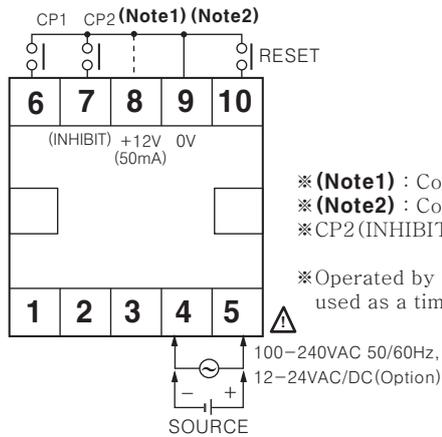


- ※ (Note1) : Connection of PNP input
- ※ (Note2) : Connection of NPN input
- ※ CP2 (INHIBIT) : Time Hold terminal when using for timer.
- ※ Operated by a power ON start when it is used as a timer.

## Dimensions

### Bracket

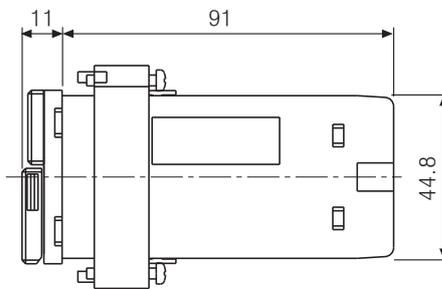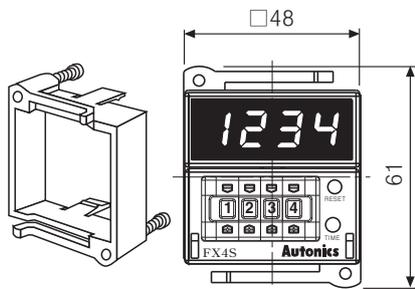

### Panel cut-out

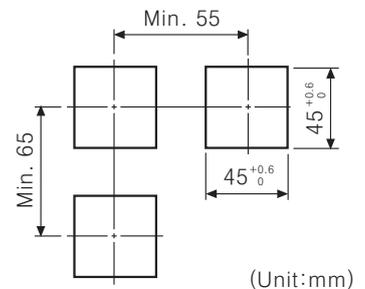


(Unit:mm)


## Input connections

### Input logic : No-voltage (NPN) input


#### Solid-state input (Standard sensor : NPN output type sensor)

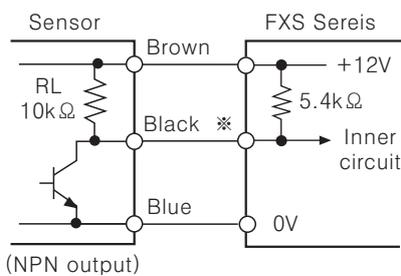

※ CP1, CP2 (INHIBIT), RESET input

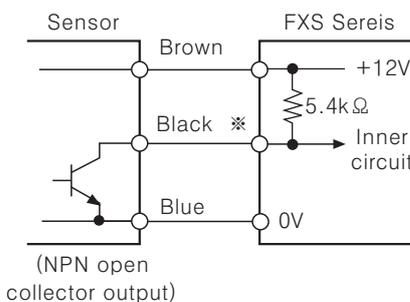


#### Contact input

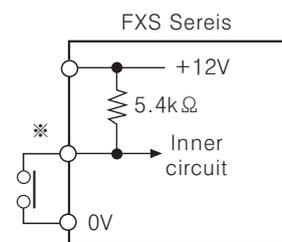


※ Please select the counting speed as 30cps when it is used for counter.

### Input logic : Voltage (PNP) input


#### Solid-state input (Standard sensor : PNP output type sensor)

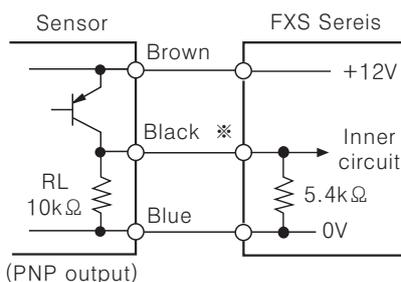

※ CP1, CP2 (INHIBIT), RESET input

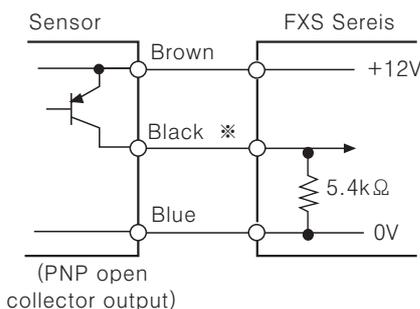

#### Contact input

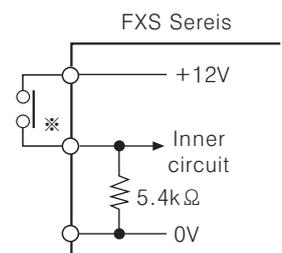


※ Please select the counting speed as 30cps when it is used for counter.

# Up/Down Counter/Timer

## Input logic selection

● Select NPN (No-voltage input)

● Select PNP (Voltage input)


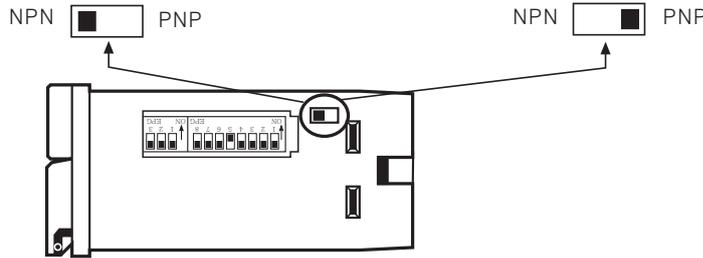


※ Please be sure to turn OFF the power before changing input logic.

## Input & Output connections

◎ In case of operating the load by power supply of the sensor

◎ In case of operating the load by external power supply

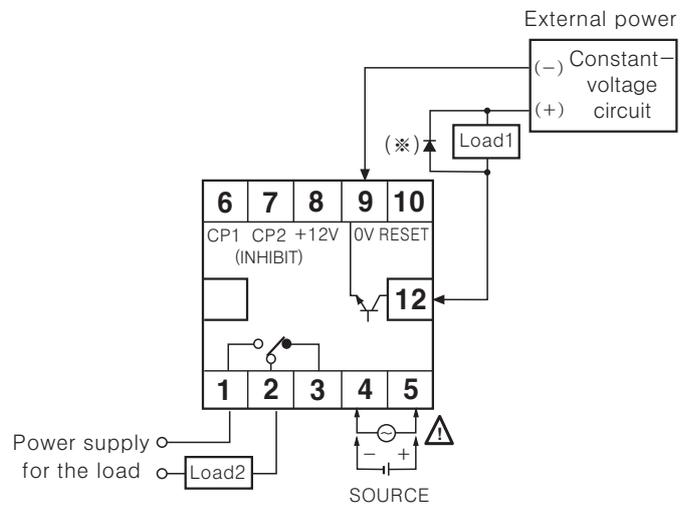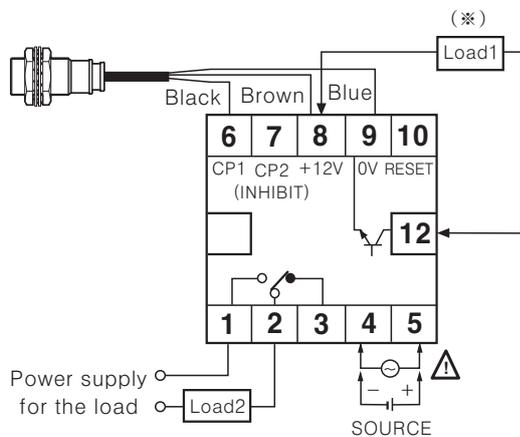

● (※) Please select proper capacity of load, because total current consumption should not exceed current capacity. (Max. 50mA)

● Contact capacity : Max. 250VAC 3A

● The capacity of Load1 must not exceed Max. 30VDC, Max. 100mA of the switching capacity of the transistor.


● Please do not supply the reverse polarity voltage.

● (※) Please connect the surge absorber (Diode) at both terminals of Load1, in case of using the inductive load. (Relay, etc.)

◎ Using 2 counters with one sensor

● It is available to use 2 counters with one sensor.


Please connect as the power of sensor is supplied from only one of counters and design input logic with same way.

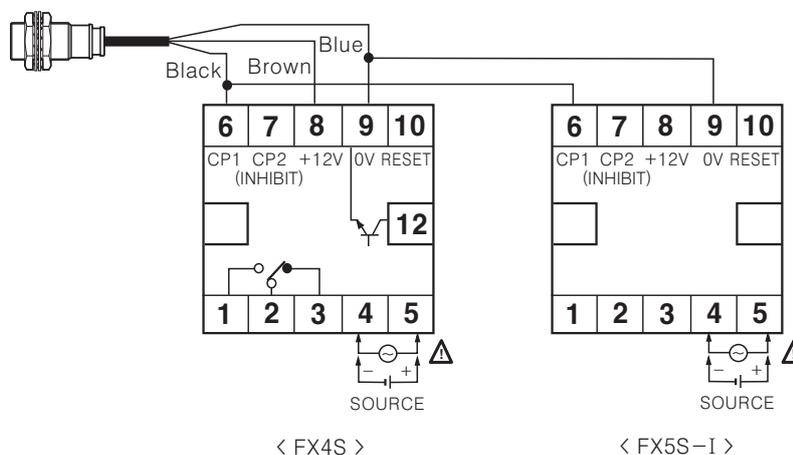


(A)	Photo electric sensor
(B)	Fiber optic sensor
(C)	Door/Area sensor
(D)	Proximity sensor
(E)	Pressure sensor
(F)	Rotary encoder
(G)	Connector/Socket
(H)	Temp. controller
(I)	SSR/Power controller
(J)	Counter
(K)	Timer
(L)	Panel meter
(M)	Tacho/Speed/Pulse meter
(N)	Display unit
(O)	Sensor controller
(P)	Switching power supply
(Q)	Stepping motor & Driver & Controller
(R)	Graphic/Logic panel
(S)	Field network device
(T)	Production stoppage models & replacement

# FXS Series

## ■ Description of inner DIP switches

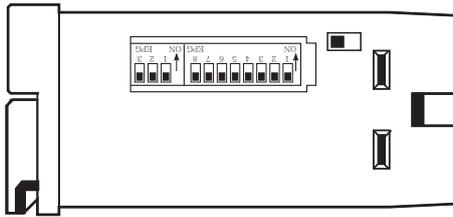

- ※ Inner selection switch is changed from 10pin to 11pin with upgrade of counting speed.
- ※ There is no output operation mode in indication type(FX5S-I) and SW2 selection switch.

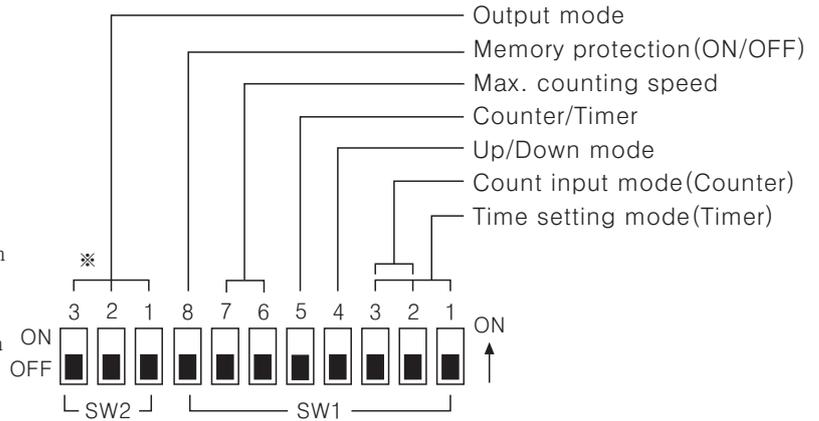

### ● Up/Down mode

SW1	Function
ON OFF <input type="checkbox"/>	Down mode
ON OFF <input type="checkbox"/>	
ON OFF <input type="checkbox"/>	Up mode
ON OFF <input type="checkbox"/>	

### ● Counter/Timer

SW1	Function
ON OFF <input type="checkbox"/>	Counter
ON OFF <input type="checkbox"/>	
ON OFF <input type="checkbox"/>	Timer
ON OFF <input type="checkbox"/>	

### ● Memory protection


SW1	Function
ON OFF <input type="checkbox"/>	Disable the memory protection
ON OFF <input type="checkbox"/>	
ON OFF <input type="checkbox"/>	Enable the memory protection
ON OFF <input type="checkbox"/>	

### ● Max. counting speed


SW1	CP1, CP2
ON OFF <input type="checkbox"/> ON OFF <input type="checkbox"/>	1cps
ON OFF <input type="checkbox"/> ON OFF <input type="checkbox"/>	30cps
ON OFF <input type="checkbox"/> ON OFF <input type="checkbox"/>	2kcps
ON OFF <input type="checkbox"/> ON OFF <input type="checkbox"/>	5kcps

## ■ Setting function of Decimal point


Display the decimal point.

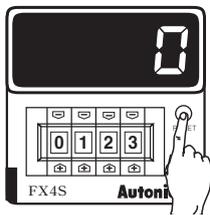


RUN mode

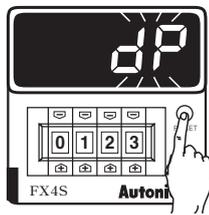

※ When "dP" flashes, touch RESET button once.

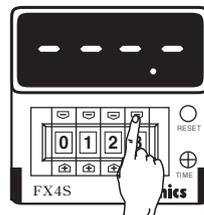

※ Set the position of decimal point using +, - buttons of digital switch.

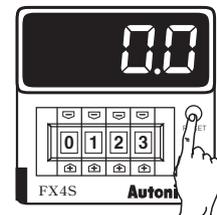


Return to RUN mode

※ It returns to RUN mode by press RESET button over 3sec.

※ If press RESET button for over 3sec. it advanced to decimal point setting mode.





















### ● Changing the decimal point

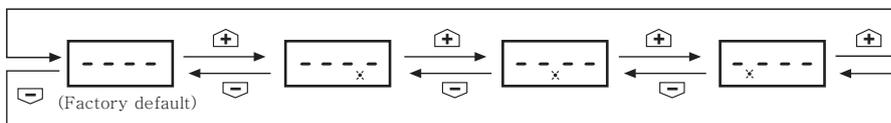

- ※ It returns to RUN mode if no RESET button or digital switch is applied for 60sec. in decimal point setting status.
- ※ The decimal point setting is not existed in indication type.

# Up/Down Counter/Timer

## Input operation mode(Counter)

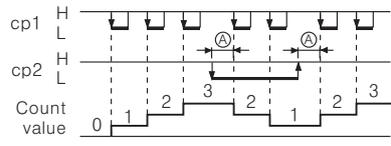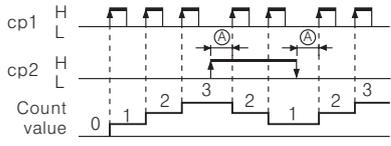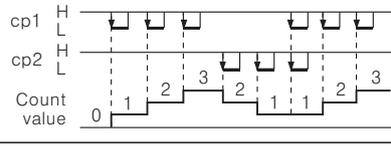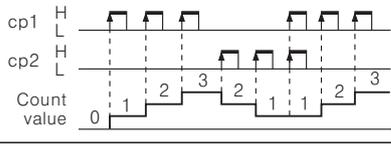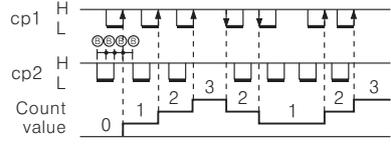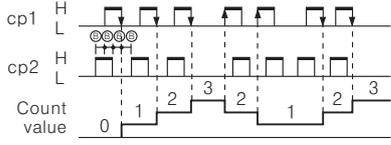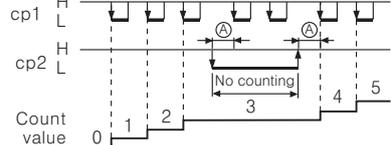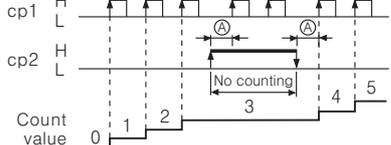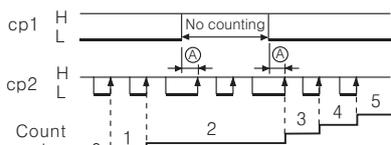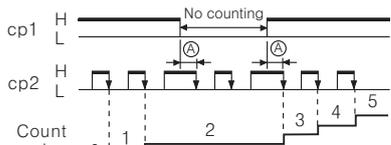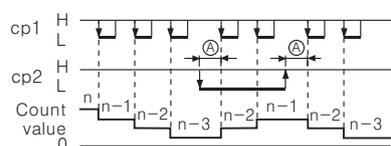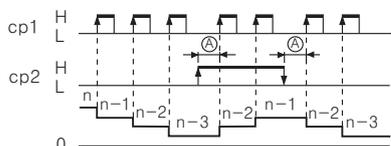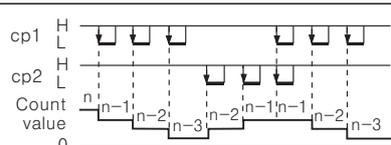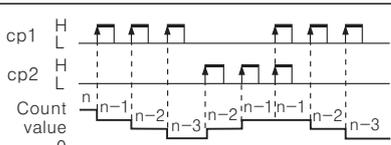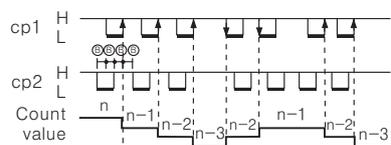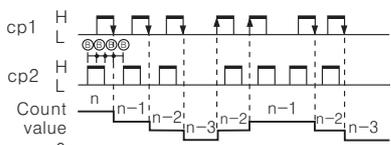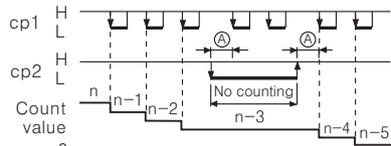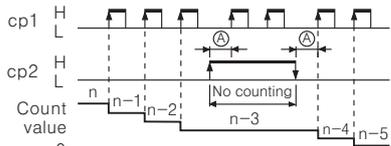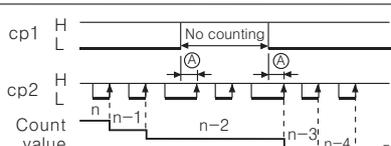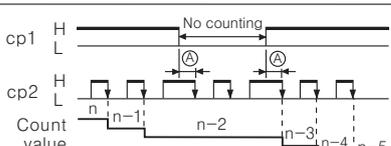Input mode			No-voltage input(NPN)	Voltage input(PNP)
Count up mode ON  OFF 	Up/Down-A (Command input)	ON  OFF 		
	Up/Down-B (Individual input)	ON  OFF 		
	Up/Down-C (Phase difference input)	ON  OFF 		
	Up (Count up input)	ON  OFF 	 	 
Count down mode ON  OFF 	Up/Down-D (Command input)	ON  OFF 		
	Up/Down-E (Individual input)	ON  OFF 		
	Up/Down-F (Phase difference input)	ON  OFF 		
	Down (Count down input)	ON  OFF 	 	 

\*Ⓐ : Over min. signal width, Ⓑ : Over 1/2 of min. signal width.


If the signal width of Ⓐ or Ⓑ is less than min. signal width, ±1 of count error is occurred.

- (A) Photo electric sensor
- (B) Fiber optic sensor
- (C) Door/Area sensor
- (D) Proximity sensor
- (E) Pressure sensor
- (F) Rotary encoder
- (G) Connector/Socket
- (H) Temp. controller
- (I) SSR/Power controller
- (J) Counter**
- (K) Timer
- (L) Panel meter
- (M) Tacho/Speed/Pulse meter
- (N) Display unit
- (O) Sensor controller
- (P) Switching power supply
- (Q) Stepping motor & Driver & Controller
- (R) Graphic/Logic panel
- (S) Field network device
- (T) Production stoppage models & replacement


# FXS Series

## Counting operation of indication type(Counter)


### Up input mode

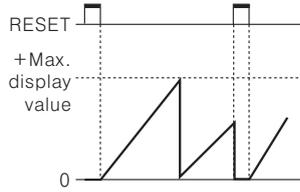


### Down input mode

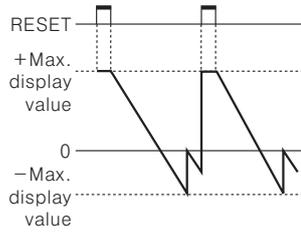

### Up/Down-A, B, C input mode

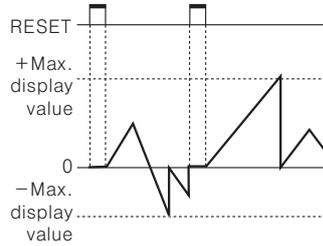


### Up/Down-D, E, F input mode

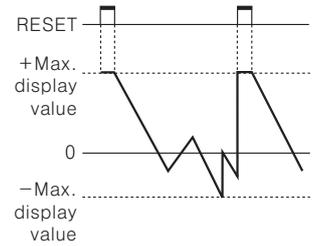


## Time operation of indication type(Timer)

### Up input mode

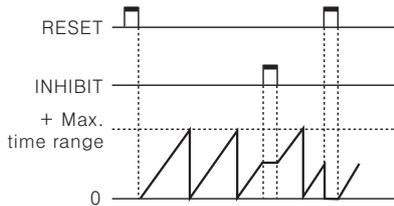

### Down input mode

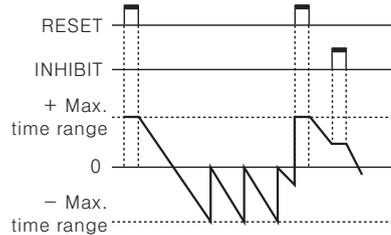

## Time setting mode(Timer)

SW1	4Digit	5Digit
1 2 3 ON [ ] [ ] [ ] OFF [ ] [ ] [ ]	99.99sec.	9999.9sec.
1 2 3 ON [ ] [ ] [ ] OFF [ ] [ ] [ ]	999.9sec.	99999sec.
1 2 3 ON [ ] [ ] [ ] OFF [ ] [ ] [ ]	9999sec.	9min. 59.99sec.
1 2 3 ON [ ] [ ] [ ] OFF [ ] [ ] [ ]	99min. 59sec.	99min. 59.9sec.
1 2 3 ON [ ] [ ] [ ] OFF [ ] [ ] [ ]	999.9min.	9999.9min.
1 2 3 ON [ ] [ ] [ ] OFF [ ] [ ] [ ]	99hour 59min.	9hour 59min. 59sec.
1 2 3 ON [ ] [ ] [ ] OFF [ ] [ ] [ ]	999.9hour	999hour 59min.
1 2 3 ON [ ] [ ] [ ] OFF [ ] [ ] [ ]	9999hour	9999.9hour

# Up/Down Counter/Timer

## Output operation mode (by internal DIP switch)

■ ← One-shot output (0.05 to 5sec.)

□ ← Retained output

Output mode (SW2)	ON 4 OFF 4		Operation after count up
	Up mode Up / Down-A, B, C	Down mode Up / Down-D, E, F	
<b>F</b> ON 1 2 3 OFF			The display value continues until reset signal is applied then output is held. • Retained output will be maintained until reset signal is applied.
<b>N</b> ON 1 2 3 OFF			Display value and retained output are maintained until Reset signal is applied.
<b>C</b> ON 1 2 3 OFF			The display value returns to reset start status as soon as display value is reached to preset value.
<b>R</b> ON 1 2 3 OFF			The display value is held until output is OFF then returns to reset start status.
<b>K</b> ON 1 2 3 OFF			The display value continues until reset signal is applied.
<b>P</b> ON 1 2 3 OFF			The display value is held during one-shot output time, counting process is returned to reset start status as soon as output is ON.
<b>Q</b> ON 1 2 3 OFF			The display value continues during one-shot output time.
<b>S</b> Counter ON 1 2 3 OFF	<b>Up input</b> 	<b>Down input</b> 	<ul style="list-style-type: none"> <li>• Up, UP/Down-A, B, C input mode - Output is ON when (Display value) ≥ (Preset value)</li> <li>• Down, UP/Down-D, E, F input mode - Output is ON when (Display value) ≤ (Zero)</li> </ul>
	<b>Up / Down-A, B, C</b> 	<b>Up / Down-D, E, F</b> 	
<b>S</b> Timer ON 1 2 3 OFF			The output turns ON after the setting time and then turns OFF after the setting time. This operation is repeated sequentially. (Flicker operation)

\*One-shot output time is set by front TIME adjuster.

(A) Photo electric sensor

(B) Fiber optic sensor

(C) Door/Area sensor

(D) Proximity sensor

(E) Pressure sensor

(F) Rotary encoder

(G) Connector/Socket

(H) Temp. controller

(I) SSR/Power controller

(J) Counter

(K) Timer

(L) Panel meter

(M) Tacho/Speed/Pulse meter

(N) Display unit

(O) Sensor controller

(P) Switching power supply

(Q) Stepping motor & Driver & Controller

(R) Graphic/Logic panel

(S) Field network device

(T) Production stoppage models & replacement

# FXS Series

## ■ Proper usage


### ◎ Reset function

#### ● Reset

In case of changing the input mode after supplying the power, please take external reset or manual reset. **If reset is not executed, the counter will be working as previous mode.**

#### ● Reset signal width

It is reset perfectly when the reset signal is applied during **min. 20ms** regardless of the contact input & solid-state input.

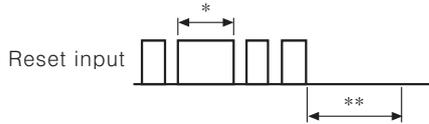


\*In case of a contact reset, it is reset perfectly if the ON time of reset signal is applied during min. 20ms even though a chattering is occurred.

\*\*It can be input the signal of CP1, CP2 after min. 50ms from closing time of reset signal.

### ◎ Sensor power

The power 12VDC which is provided to sensor is built in it. Please use it under Max. 50mADC.

### ◎ Min. signal width of CP1, CP2 input

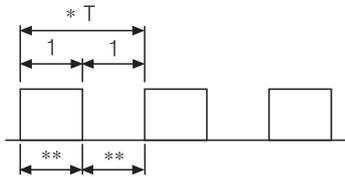

\*Please make duty ratio (ON/OFF) 1:1


\*\* Min. signal width

- 1cps : Min. 500ms
- 30cps : Min. 16.7ms
- 2kcps : Min. 0.25ms
- 5kcps : Min. 0.1ms

### ◎ Max. counting speed

This is a response speed per 1 sec. when the duty ratio (ON:OFF) of input signal is 1:1.

If the duty ratio is not 1:1, the width between ON and OFF should be over min. signal width and the response speed will getting slower against input signal. And one of ON width and OFF width is under min. signal width, this product may not respond.

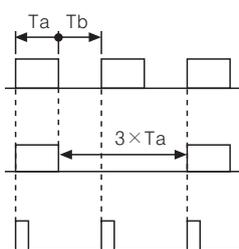


Width of Ta(ON) and Tb(OFF) must be larger than Min. signal width.

Max. counting speed is 1/2 value of rated spec. when duty ratio is 1:3.


It can not respond if it is smaller than min. signal width(Ta).

### ◎ INHIBIT (For timer)

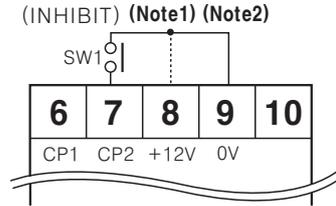

※ (Note1): PNP input  
 (Note2): NPN input


- If SW1 is ON, it becomes INHIBIT. (Time Hold)
- When power is applied, it starts to progress and INHIBIT mode is used to stop the time is under the progress at the moment.
- When SW1 is OFF, timer starts to progress again.

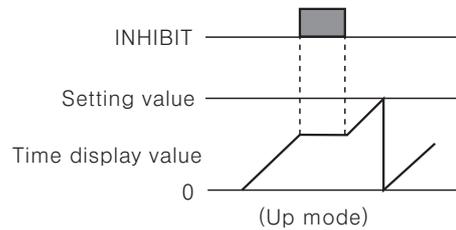

### ◎ Error display


Error signal	Error description	Returning method
Err0	Zero setting status	Change the setting value to non zero status

※ When Error is displayed, the output continues OFF state.  
 ※ There is no Error function in indicator.

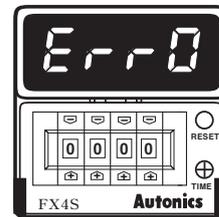


### ◎ Power

The inner circuit voltage starts to rise up for the first 100ms after power on, the input may not work at this time. And also the inner circuit voltage drops down for the last 500ms after power off, the input may not work at this time.



### ◎ Case & DIP switch detachment



Push a lock part to front direction and widen it simultaneously.

※ Please be careful of the injury caused by tools.